


IMPORTANT!

For proper operation, you **MUST** use the release bearing extension sleeve included with this clutch set. Please remove the factory release bearing from the hydraulic slave cylinder by pulling straight off. After removing the factory release bearing, slide the Centerforce® release bearing extension sleeve on to the hydraulic slave cylinder as shown. The factory release bearing should seat fully onto the bearing extension sleeve and lock in place (As shown below). Please be careful not to compress the hydraulic slave too far which would result in fluid loss.

Should you have questions or need further information, please call our technical service department at (928) 771-8422 or email us from www.centerforce.com.

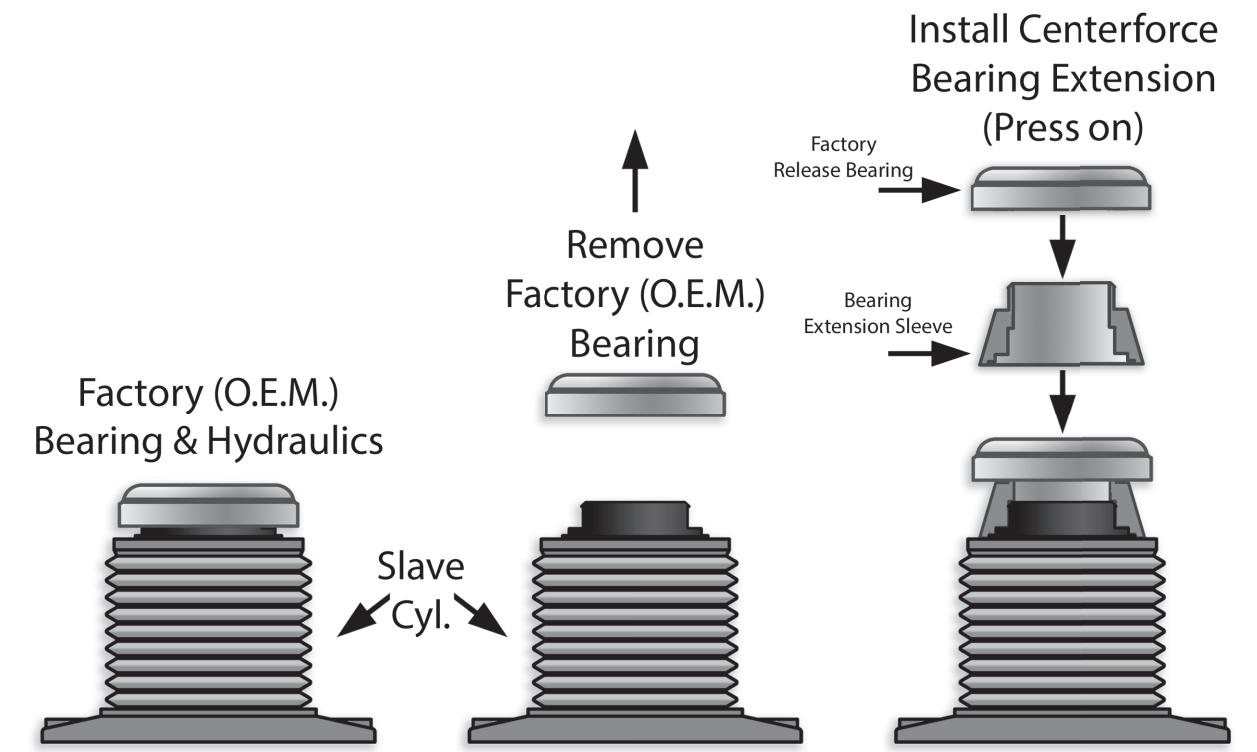

CENTERFORCE
DUAL FRICTION

