


# IMPORTANT

## "NOTE"

CENTERFORCE USES THREE LIMITER BOLTS & WASHERS TO HELP PREVENT PRESSURE PLATE DAMAGE DURING SHIPMENT. REMOVE AND DISCARD THE THREE LIMITER BOLTS & WASHERS BEFORE ATTEMPTING TO INSTALL THE CLUTCH ASSEMBLY.

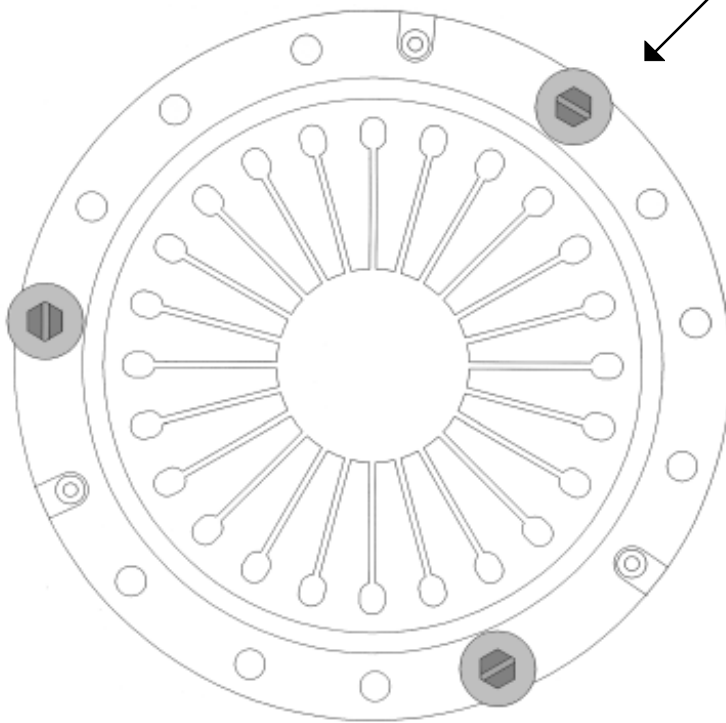

**UNSCREW  
LIMITER BOLTS  
&  
WASHERS  
BEFORE  
INSTALLING  
THE CLUTCH  
ASSEMBLY**



**"NOTE"** Centerforce tip sheets are for general reference only. Please refer to your owners manual for vehicle specifications.

# IMPORTANT